


EVIDENTIARY VIEWING EQUIPMENT

ANNOTATION SCREEN

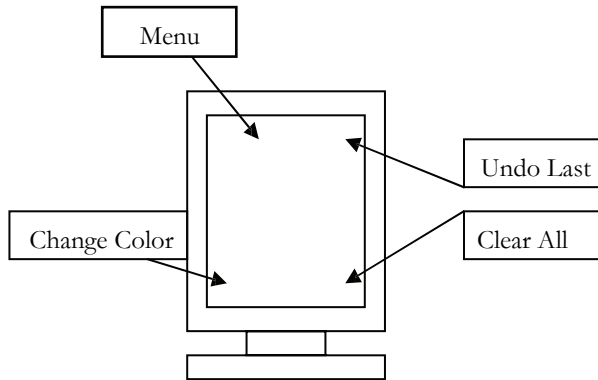

State-of-the-art technology that allows attorneys and witnesses to annotate images as they appear on screen with identification pointers and lines of various sizes and colors using an annotation screen. The annotation screen is similar to those seen on television sports and news programs. Simply touch screen with finger to highlight and identify areas of interest.

Troubleshooting Tip:

If the screen does not display annotations, turn Pointmaker off. When Pointmaker reboots with blue title screen and copyright information, touch the center of the screen to start calibration. Tap corners as indicated for calibration. This must be done for both witness and podium annotation screens.

COURT EVIDENTIARY EQUIPMENT LIST

- Computer
- DVD/VCR Combo Player
- Audio Cassette Player
- ELMO Image Projector
- GYRO Mouse
- Laptop connection at Podium
- Monitors at Counsel Table and Bench
- Annotation Screens at Podium and Witness Stand
- Large-screen television monitor for jury

Court support is limited to:

- Equipment connection
- Equipment recognition
- Proper functionality
- PC and application functioning
- Basic instruction to litigants

For assistance, please email IT at:
tanya.mabry-cullings@fultoncountyga.gov

Fulton County Courthouse
Justice Center Tower
185 Central Avenue SW
Atlanta, GA 30303

Phone: 404-613-4497
Fax: 404-730-8182

STATE COURT
OF
FULTON COUNTY
GEORGIA

Courtroom of the
Hon. Wesley B. Taylor
Justice Center Tower
Room 3E



EVIDENTIARY
PRESENTATION
EQUIPMENT

REFERENCE GUIDE

Fulton County State Court Information Systems Division

Courtroom 3E has state-of-the-art technology for displaying evidentiary materials. The equipment described herein is available for use by the parties. The equipment can be used to show digital video and still images captured in digital or printed formats and to play audio cassette tapes, CDs, or MP3 players. Images can be modified with screen annotations. Prepare for trial by contacting IT before court to make certain the evidence viewing equipment has the associated media player, drivers, and accessories necessary for you to make an effective presentation.

Media Players Installed

RealPlayer, QuickTime, Windows Media Player, DIVX, MPEG, and AVI.

Audio Cassette Player

The cassette player is standard with dual cassette decks that play audio from Type I, II, and IV (metal) audio cassette tapes.

DVD / VCR Combo

DVD Readable Formats

DVD Video, DVD-RW/-R, DVD+R, Video CD/Music CD, CD-RW/-R

Note: DVD player can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats: Music CD, Video CD, MP3 audio tracks, JPEG image files, and KODAK Picture CD format; DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs recorded in the following formats: MP3 audio tracks, JPEG image files, 8 cm DVD+RW, DVE-RW, and DVD-R recorded with a DVD video camera.

DVD Tips

1. You must finalize digital media on recording equipment before playing on another device.
2. Know the format & media extension of your media files before trial.
3. Download media player needed on a flash drive or have IT download to courtroom computer prior to trial.
4. Arrange with IT to test your media on court equipment before trial.

ELMO Image Projector

ELMO Functions

- View printed documents & images one at a time.
- View slides, x-rays, and overhead transparencies.
- View 3-D objects
- Negative/Positive option for viewing film negatives
- Power Zoom Magnifying Lens

ELMO Tips

1. If ELMO does not display, use Input Selector to select ELMO input.
2. Use bottom lamp for viewing transparencies.
3. Equipment displays landscape as opposed to portrait view.
4. Additional controls slide out from main panel for Color/BW, negative conversions, and magnification.

Gyro Mouse

The Gyro Mouse is a cordless optical air mouse that can be used to control the computer from a desktop surface or while holding in mid-air.

Gyro Mouse Tips

1. If Gyro Mouse cursor is visible but shows no movement, double click the Activation Trigger to keep the cursor continuously active.
2. Gyro Mouse must be kept on charging cradle. If LED on mouse is flashing, the battery is low. If LED on mouse is off, the battery is dead.